


Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES." After reading, keep the document(s) where it will be available for immediate reference.

Functions

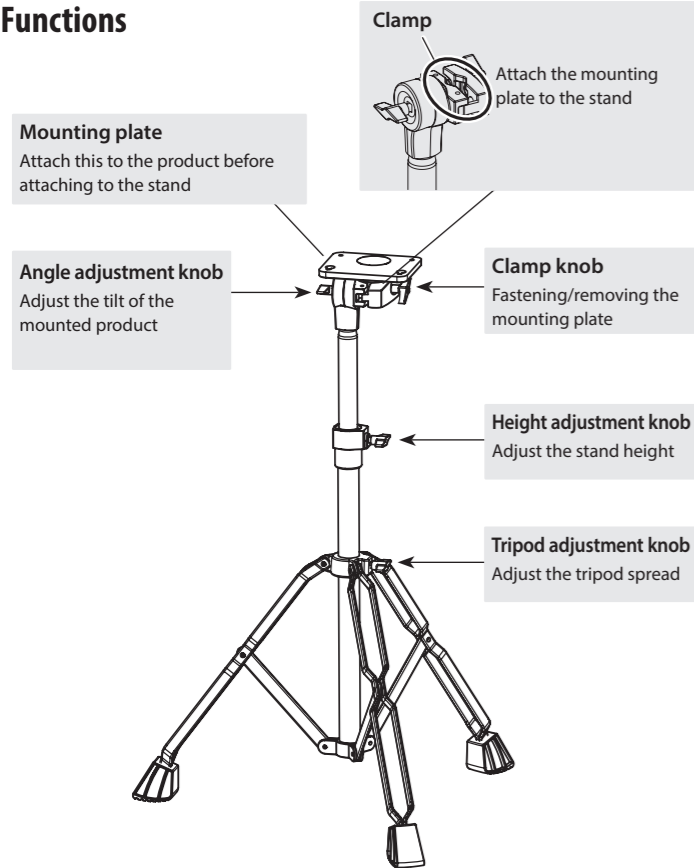

Setup

1. Adjust the spread of the tripod.

* Use the stand with the tripod spread out to stabilize the stand.

2. Adjust the stand's height.

* Use this stand so that the top surface of the mounted product is no higher than 1 meter (3' 3" inches) above the floor.

When the upper surface of the mounted product is at a height of less than 75 cm (2' 5" inches) from the floor (with the product already attached to the stand)

Open the tripod so that the distance between each leg (at the floor) is approximately 50 cm (1' 7" inches).

When the upper surface of the mounted product is at a height of 75 cm (2' 5" inches) or greater above the floor (with the product already attached to the stand)

Open the tripod to the fullest extent.

3. Use screws to attach the mounting plate to the product. The screws are attached to the bottom surface of the product (four locations).





* When attaching the product to the mounting plate, do not use any screws other than those that are included with the product. The product might be damaged if you use other screws.

4. Attach the mounting plate to the stand.

Insert the mounting plate into the clamp, then turn the clamp knob to secure the mounting plate.

5. Turn the angle adjustment knob to adjust the tilt of the mounted product.

* If you loosen this excessively, the part might come off or the product might fall down.

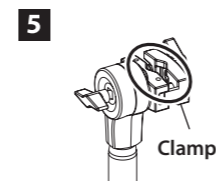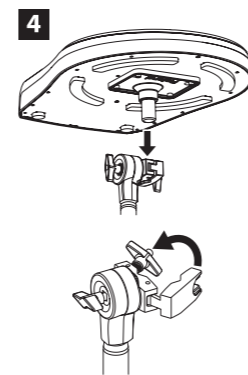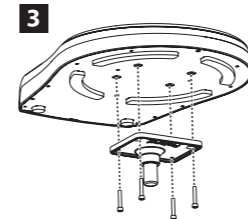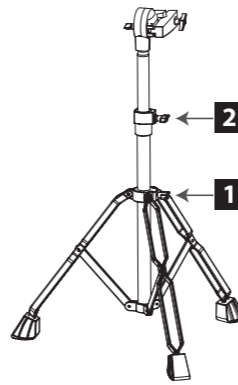

USING THE UNIT SAFELY

ANWEISUNGEN ZUR VERMEIDUNG VON FEUER, ELEKTRISCHEM SCHLAG ODER PERSONENSCHÄDEN

Über die Hinweise ⚠️ WARNUNG und ⚠️ ACHTUNG

| | |
|-------------------|---|
| ⚠️ WARNUNG | Wird für Anweisungen verwendet, die den Anwender vor Lebensgefahr oder der Möglichkeit schwerer Verletzungen bei falscher Anwendung des Gerätes warnen sollen. |
| ⚠️ ACHTUNG | Wird für Anweisungen verwendet, die den Anwender vor Verletzungsgefahr oder der Möglichkeit von Sachbeschädigung bei falscher Anwendung des Gerätes warnen sollen. * Als Sachbeschädigung werden Schäden oder andere unerwünschte Auswirkungen bezeichnet, die sich auf Haus/Wohnung und die darin enthaltene Einrichtung sowie Nutz- oder Haustiere beziehen. |

Über die Symbole

| | |
|----|--|
| ⚠️ | Das Symbol ⚠️ weist den Anwender auf wichtige Anweisungen oder Warnungen hin. Die genaue Bedeutung des Symbols ist an der Abbildung innerhalb des Dreiecks zu erkennen. Im Falle des links abgebildeten Symbols sind dies allgemeine Vorsichtsmaßnahmen, Warnungen oder Gefahrenhinweise. |
| ⓘ | Das Symbol ⓘ weist den Anwender auf Vorgänge hin, die niemals ausgeführt werden dürfen (verboten sind). Welcher Vorgang genau nicht ausgeführt werden soll, ist an der Abbildung innerhalb des Kreises zu erkennen. Im Falle des links abgebildeten Symbols bedeutet es hier, dass das Gerät niemals auseinander genommen werden darf. |
| 🔌 | Das Symbol 🔌 weist den Anwender auf Vorgänge hin, die ausgeführt werden müssen. Welcher Vorgang genau ausgeführt werden soll, ist an der Abbildung innerhalb des Kreises zu erkennen. Im Falle des links abgebildeten Symbols bedeutet es hier, dass das Netzkabel aus der Steckdose gezogen werden muss. |

BEACHTEN SIE IMMER FOLGENDES

⚠️ WARNING

Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



Do not repair or replace parts by yourself

Be sure to contact your dealer, a Roland service center, or an official Roland dealer.



For a list of Roland service centers and official Roland dealers, refer to the Roland website.

Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.



Do not place in an unstable location

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.



Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.



⚠️ CAUTION

Use this stand only for specific Roland products

This stand for use only with specific Roland musical instruments. See apparatus instructions. Use with other models is capable of resulting in instability causing possible injury.



Evaluate safety issues before using stands

Even if you observe the cautions given in the owner's manual, certain types of handling may allow this product to fall from the stand, or cause the stand to overturn. Please be mindful of any safety issues before using this product.



Avoid climbing on top of the unit, or placing heavy objects on it

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Take care so as not to get fingers pinched

When setting up or storing this stand, take care not to pinch your fingers. Whenever a child uses the unit, an adult should be on hand to provide supervision and guidance.



- Clamp
- Angle adjustment section
- Tripod spread adjustment section
- Height adjustment section

Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.



- Removable Parts
- Knobs, washer

Regarding Compatible Products

For details on Roland products that are compatible with this stand, refer to the support information on the Roland website.



http://roland.cm/pds-20_cp

- * Do not insert your fingers inside the stand pipe. This may result in injury.
- * Take care not to hit your face or head against any of the stand's protruding components (knobs, mounting plate, etc.).
- * When you loosen the knob while making adjustment of each parts, the pipe, product and clamp knob etc. might fall and pinch your fingers. The product might be damaged if it falls. Use one hand to support the tom, pipe, or cymbal mount while you slowly loosen the knob.
- * To prevent the stand from tipping over or falling, tighten the knobs until there is no looseness.
- * This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

IMPORTANT NOTES

Placement

- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.

Maintenance

- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- When disposing of the packing carton or cushioning material in which this unit was packed, you must observe the waste disposal regulations that apply to your locality.

Intellectual Property Right

- Roland is either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.