



USER MANUAL ELECTRIC GUITAR

CONTENTS

English	1
Français	14
Deutsch	27
Italiano	40
Español	53
日本語	66

 
Welcome to Donner

Thank you for choosing Donner electric guitar!


Please read this instruction manual carefully before using this product.

Be sure to save these instructions for future reference.


MAIN PARTS OF THE GUITAR

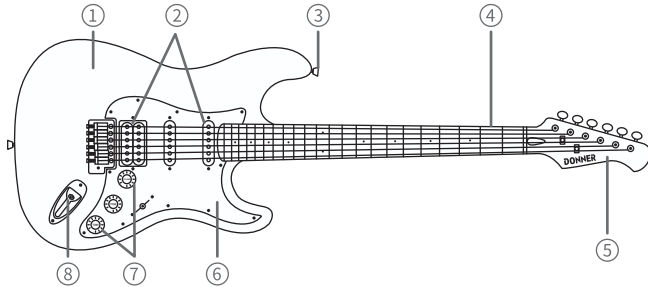

 
- 1.Body
- 2.Pickups
- 3.Front strap button
- 4.Neck
- 5.Headstock
- 6.Pickguard
- 7.Control knobs and switches
- 8.Cord and jackplate

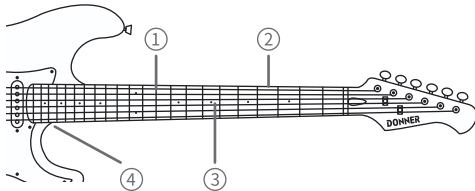

 - 1.Frets
- 2.Binding
- 3.Fret markers
- 4.Neck joint

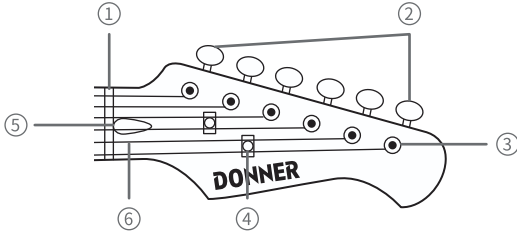

 - 1.Nut
- 2.Tuning keys
- 3.Tuning posts
- 4.String retainers
- 5.Truss rod adjustment
- 6.Strings

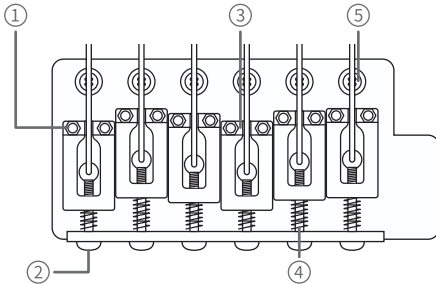

- 1.Saddle height adjustment screws
- 2.Intonation adjustment screws
- 3.Bridge saddles
- 4.Tension springs
- 5.Bridge mounting screws

SAFETY WARNINGS AND GUIDELINES

1. STRINGS

- Use only good quality strings, we recommend purchasing the Donner Electric Guitar Strings. It will help you avoid a lot of problems. The strings of acoustic guitars or classical guitars are not suitable for electric guitars.
- There is no set rule for how often you should change your strings. We recommend that you replace your strings regularly. If you play daily, we recommend that you replace your strings every 2 or 3 weeks. If you have strings that are worn, flattened, kinked, corroded, rusted, or mucked up with sweat grease, and grime, then it is time to change your strings. Otherwise, strings should be changed when they are no longer giving you the tone, brightness, and response that you desire.
- Keep your head at a proper distance from the guitar when replacing or adjusting strings. A sudden break of the strings can harm your eyes.
- After the string replacement, please cut off the excess to avoid damage to the human body or a guitar gig bag/case.
- In the case of not playing for a long time, we recommend that you loosen the strings appropriately to avoid bending the neck.
- The way you wind the strings around the tuning keys is very important. It determines if your strings stay in tune. Please refer carefully to the instructions for string winding.
- To play more comfortably, the bridge (especially a tremolo bridge) needs special tuning, which directly affects the comfort of the play.
- To achieve better playing comfort, please do not neglect the setting of neck relief. When you change the strings of different specifications, do not forget to re-adjust this content.
- Please make sure that your octave is adjusted correctly. This ensures that you play every note accurately. Please refer carefully to the instructions for adjusting intonation.
- When you use a strap on the guitar, please make sure to use a high-quality strap and check whether the strap is safe and intact. Don't make sudden movements that cause the guitar to fall.

2. CLEANING

- To keep your new Donner guitar in good condition, we suggest that you should get into the habit of cleaning the guitar every time you finish playing. All guitar parts should be cleaned regularly.
- The metal parts are easily oxidized, please make sure to wipe the strings, bridge, pickups, and tuners with a dry, delicate cotton cloth every time you finish playing. (But remember, the cloth used for wiping metal parts cannot be the same as the cloth used for wiping the guitar body)
- We also recommend that you wipe the fingerboard with a dry, delicate cotton cloth every time you finish playing, so you can prevent dirt buildup. If the fingerboard becomes very dirty, please remove the strings and clean the fingerboard thoroughly.
- Avoid the use of furniture polish or any glass cleaner on a guitar as this will not react well with the finish.
- Maple fingerboard cleaning: Finished maple or glossy fingerboard can be cleaned and polished with any standard guitar cleaner intended for finished woods. Unfinished/raw maple fingerboards are essentially raw wood and require an oil-based fingerboard cleaner for cleaning and conditioning.
- For gloss-finished surface cleaning, such as the body, back of the neck, and headstock, we recommend using specialized cleaning products only. Use lightly with a soft polishing cloth or cotton cloth.

3. STORAGE

- When not playing your guitar, keep it in its gig bag/case. If you don't own a gig bag/case, we strongly recommend purchasing a Donner gig bag/case. Using a gig bag/case will offer the best possible protection against damage and will keep your instrument from gathering dust.
- Keeping your guitar safe and in excellent playing condition is all about what you do with it when you're not playing it. Keeping it in a safe location like its gig bag/case and maintaining the proper humidity level where it's stored are all key for proper guitar care.

- Guitars are also subject to temperature changes, especially when traveling. Dramatic leaps in temperature over a short period can damage or warp parts of the guitar.
- Avoid exposing your guitar to rain, use it near water or any extremely hot, cold, damp, or dry conditions.

NOTE:

Damage to your instrument caused by neglecting the instructions above or subjecting your instrument to extreme temperatures will not be covered under Donner warranty.

SETUP YOUR DONNER GUITAR

STRINGS REPLACEMENT / WINDING

